Pri svakoj promjeni lozinke školske e-mail adrese, potrebno je iznova konfigurisati router po sljedećem uputstvu:

## Konfiguracija router-a DSL-584 T

- Za konfigurisanje se koristi WEB interfejs. Adresu router-a 192.168.1.1 ukucajte u vaš browser.



 Pojaviće se prozor u koji treba da unesete korisničko ime (user name) i lozinku (password), koje ćete dobiti od Računarskog centra Ministarstva prosvjete i nauke.



Kada prođete autentifikaciju, dobićete novi prozor sa menijem u kome možete početi konfigurisanje router-a.

D-Link Building Networks for People	DSL-584T ADSL Router					
	Home	Advanced	Tools	Status	Help	
Wizard WAN LAN DHCP DNS Dynamic DNS	Setup Wiz. The DSL-584 The setup and Service Provi minutes. Ples	and T is an ADSL Router Ideal and will guide you to comfu error The DSL-6475 easy is e follow the setup without the setup without	for home networks pure the DSL-584T setup will allow yo t step by step to cor	ig and small business to connect to your ISP ( us have internet access figure the DSL-SB4T.	tetworking, Itemet s within	

Izaberite Run Wizard.

Otvoriće se prozor koji opisuje korake u konfigurisanju.



## Kliknite na Next.

• U novootvorenim prozoru izaberite vremensku zonu.



## Kliknite na Next.

U novom prozoru birate PPPoE/PPPoA.

D-Link	DSL-584T ADSL Router			
Select Inte	rnet Connection Type (WAN)			
Select the connection typ	be to connect to your ISP. Click Next to continue			
OPPPOE/PPPOA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)			
C Dynamic IP Address	Choose this option to obtain an IP address automatically from your ISP.			
C Static IP Address	Choose this option to set static IP information provided to you by your ISP.			
C Bridge Mode	Choose this option if your ISP uses Bridge Mode.			
	900			
	Back Next Exit			

## Kliknite na Next.

U polje Username ukucajte školsku e-mail adresu, u polje Password lozinku.
Ostala podešavanja uradite kao što je prikazano na slici.

D-Link	DSL-584T ADSL Router
Se	et PPPoE / PPPoA
Enter the PPPoE/PPPoA i Next to continue.	nformation provided to you by your ISP. Click
User Name	adsl@t-com.me
Password	•••••
VPI	8
VCI	35
Connection Type	PPPoE LLC
	300
	Back Next Exit

Kliknite na Next.

• Novootvoreni prozor sadrži poruku da su podešavanja završena.



Kliknite na Restart.

• Nakon konfigurisanja otvara se prozor sa glavnim menijem. Stanje konekcije možete provjeriti klikom na Status.

Home	Advanced	Tools	Status	H
Device Inform	ation Firmware Version	1 V3 06801102 FU	A 20060209	
LAN				
MAC Address	00:	15.E9.83.EF.4C		
IP Address	190	192.158.1.1		
Subnet Mask	256	255.255.0		
DHCP Server	En	abled		
NAT	En	abled		
WAN				
Virtual Circuit	Pvc0	-		
Status	Connect	ed		Disconne
Connection Typ	e popoe			
IP Address	85.94.10	4.13		
Subnet Mask	255 255	255.255		
Default Gateway	195.66.1	91.7		
ONS Server	195.66.1	60.1		

Ukoliko je konekcija uspostavljena treba da bude kao na slici- Status connected.

Napomena: status konekcije može se provjeriti I na samom router-u. Ukoliko je sve pravilno podešeno lampice će se ponašati na sljedeći način.

Power - stalno svijetli Status - stalno svijetli ili treperi ADSL - stalno svijetli (treperi kad postoji saobraćaj) LAN 1-4 – stalno svijetli ili treperi